

# **Extension Manual**

User portal, Dial codes & Voice mail for 3CX Phone System Version 7.0

Copyright 2006-2008, 3CX ltd.

http://www.3cx.com

E-mail: info@3cx.com

Information in this document is subject to change without notice. Companies' names and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of 3CX Ltd.

3CX Phone System for Windows is copyright of 3CX Ltd.

3CX is a registered trademark, and 3CX Phone System for Windows and the 3CX logo are trademarks of 3CX Ltd. in Europe, the United States and other countries.

Version 7.0 – Last updated 14 November 2008

## **Table of Contents**

Introduction to 3CX Phone System	5
What is 3CX Phone System for Windows?	5
Benefits to an extension user	5
The 3CX VOIP phone	5
Voice Mail	7
Introduction	7
Retrieving voice mail by phone	7
Receiving voice mail in your email inbox	8
The User Portal	9
Introduction	9
Logging in	9
Extension Settings	9
Voice Mail Settings	10
SIP Authentication	10
Forwarding Rules	11
Set your Status	12
Dial codes	13
Introduction	13
Call pick-up	13
Call Parking	13
Voicemail	14
Specifying Away / Available status	14
Logging in to the Queues	14
Intercom	14
Conferencing	15
Introduction	15
Creating a call conference	15



## Introduction to 3CX Phone System

## What is 3CX Phone System for Windows?

3CX Phone System is a software-based IP PBX that replaces a traditional PBX / telephone system. 3CX Phone System sends calls as data packets over the computer data network instead of via the traditional phone network. Phones share the network with computers and separate phone wiring can therefore be eliminated.

With the use of a VOIP gateway, you can connect existing phone lines to the IP PBX and make and receive phone calls via a regular PSTN line.

#### Benefits to an extension user

3CX Phone System delivers numerous benefits to a user of the system:


- Ability to answer and make calls from anywhere, even outside of the office
- Easy extension management using a browser
- Ability to quickly view presence (extension status) of other users
- Ability to view status of incoming lines
- Ability to view number of callers in queue
- Ability to receive your voice mail and faxes in your e-mail inbox
- Forward calls based on caller ID, time and type of call
- Quickly launch missed calls
- View an automatically updated extension number list
- Transfer incoming calls to any user with a few mouse clicks

## The 3CX VOIP phone

The 3CX VOIP phone is a small Windows application that allows you to make and receive calls via your desktop phone or using a headset connected directly to your computer.

You can see the extension numbers of other users and whether they are available to take calls. The 3CX VOIP phone has its own manual. You can download the VoIP phone at:

http://www.3cx.com/downloads/3CXVoIPClient7.msi

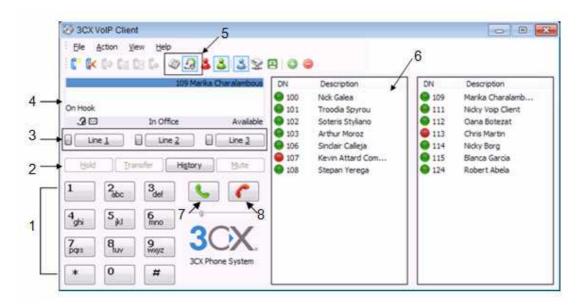

## Screenshot 1 - 3CX VOIP phone

- 1. Dial Pad
- 2.Phone functions
- 3. Lines
- 4. Status screen

- 5. Phone modes
- 6. Status panel
- 7. Dial
- 8. Hang up



## **Voice Mail**

#### Introduction

If you are unavailable to take a call, 3CX Phone System can record a message from the caller. These messages can be heard in the following ways:

- You can have the voice mail message emailed to you as a WAV attachment which can be played by Windows media player.
- You can have a notification message emailed to you so that you can dial the voice mail system and listen to the voice mail by phone.
- You can retrieve the voice mail by dialling 999 (default voice mail extension)

3CX Phone System realizes the concept of a unified messaging system, in which the user only needs to check his email inbox for email, voice and fax messages.

## Retrieving voice mail by phone

To retrieve your voice mail by phone:

- 1. Dial the voice mail system extension 999. If you are outside the company, you can dial this number from any digital receptionist menu.
- 2. Enter your extension number and when prompted your pin number. Press pound #
- 3. A prompt will be played with the number of read and unread messages in your voice mailbox.
- 4. Press \* to play your unread messages.
- 5. During playback of voice mail, you have these options:
  - 0 Skip to the next message
  - 1 Skip to the previous message.
  - 2 Repeat current message.
  - 3 Delete the current message and automatically go to the next message.
  - 9 To go to the Voice mail options menu
  - # To hang up the call

#### 6. Voice mail options menu


The voice mail options menu allows you to configure pin code and delete all read messages. It can be reached by entering 9 during message playback. The following options are valid:

• 3 – to dial an external number or internal extension



- 4 to delete all messages
- 5 To record your name (used for call by name)
- 6 To play mailbox information
- 7 To change pin number
- 8 To change your voice mail greeting
- 9 To repeat the prompt
- # To exit the call

## Receiving voice mail in your email inbox

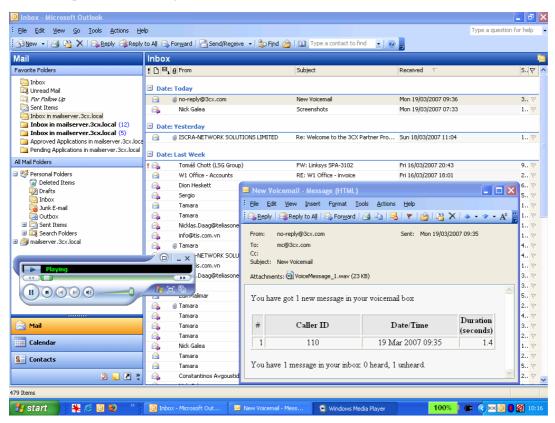

Screenshot 2 - Receiving voice mail in your inbox

If your system is setup to attach the voice mail to your email, simply open up the email and double-click on the attachment. The voice mail has been attached in the wav format, so it will automatically be opened and played in media player.



## The User Portal

#### Introduction

The user portal allows you to modify your extensions options. For example you can configure what the phone system should do if you are unavailable, on a call or away from the office.

## Logging in



## Screenshot 3 - Portal login

To login to the user portal:

1. Launch your web browser and navigate to:

http://<phone-system>/Myphone/

Where <phone-system> is the name or IP of the phone system.

Note, in some installations, this maybe http://<phone-system>:5000

2. Specify your extension number and PIN and click 'Login'. After successful login, your current settings will be shown.

## **Extension Settings**



Screenshot 4 - Extension Settings




In the tab 'Extension Settings, you can configure your extension and voice mail settings.

You can configure your name, email address, pin number and outbound caller ID. The PIN number will be used to authenticate to the voice mail system as well as the user portal. The outbound caller ID will be shown on your outbound calls. Note that this setting might be overridden by the telco provider.

## **Voice Mail Settings**

The Voice Mail Settings tab allows you to configure your voice mail options

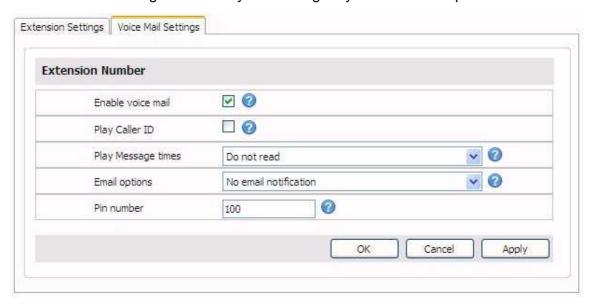

#### Screenshot 5 - Voice Mail Settings

You can configure the following options:

- Enable or disable Voice Mail
- Play Caller ID of person who left the voice mail
- Configure whether to play message times or not
- Specify whether you want to have voice mail delivered via email or not.
- Optionally change your PIN. (This PIN is used to login to the portal as well)


#### **SIP Authentication**

SIP phones require an authentication ID and password to be able to make and receive calls. You can change the authentication ID and password in this dialog. Any changes to the authentication ID and password will require your SIP desk phone or soft phone to be updated as well. Do not change authentication ID and password unless you are familiar with this setting!



## **Forwarding Rules**

Using the forwarding rules feature, you can configure exactly what should happen to calls when an extension is busy, a call remains unanswered or when an extension is unregistered. You can also make forwarding rules based on the time that the call was received and the caller ID of the caller.

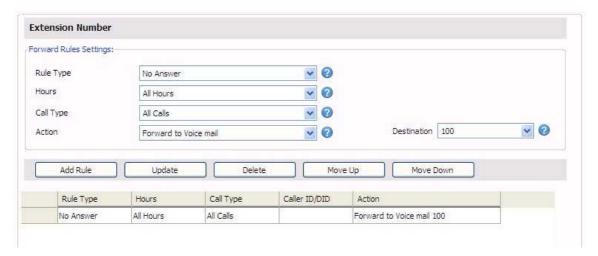

#### Screenshot 6 - Forwarding Rules


To create a forwarding rule;

- 1. In the Forwarding rules tab, select a rule type, which defines to which calls this rule will apply:
  - No Answer You will need to specify the time in seconds that you want the system to wait before it considers the call unanswered. This option can be set in the 'Continue Ringing' edit box at the bottom of the screen. This setting will apply to all 'No Answer' rules.
  - Phone Busy You will have to specify whether you want the phone or the PBX to
    do the busy signaling. By default, most SIP phones do not give a busy signal
    back, but accept a second incoming call. If you want to redirect a call when an
    extension is busy, you will need to specify "Use PBX status" in the busy
    detection list box.
  - Phone not registered If the SIP phone has not registered with 3CX Phone System (i.e. is turned off), then the phone is considered unregistered and the rule will kick in
  - Forward all Calls This rule will forward ALL CALLS
  - Based on Caller ID You can handle calls from specific callers by specifying their caller ID.
- 2. You can now specify a particular time during which hours this rule must apply. You can configure the rule to be valid all the time (All Hours), during or outside office hours (Relies on system wide office hours setting) or during specific hours (In this case you can configure the specific hours using the 'Specific hours' button)



- 3. Specify the Call Type Whether this rule should apply to all calls, or only internal or external calls
- 4. Specify the Action that the rule should take:
  - End Call
  - Forward to voice mail
  - Forward to extension –Specify the extension to forward to in the list box.
  - Forward to Outside number In this case the system will forward the call to an outside number. Be sure to include the complete dial string including the prefix.
  - Forward to Queue / ring group Specify the virtual extension number of the ring group or Queue in the list box
  - Forward to Digital Receptionist Specify the virtual extension number of the digital receptionist in the list box.
- 5. Once you have filled out all necessary fields, click on the 'Add' button to create the new rule. You can order the priority of the rules by moving rules up or down. The first rule that meets the conditions will be triggered!

## **Set your Status**

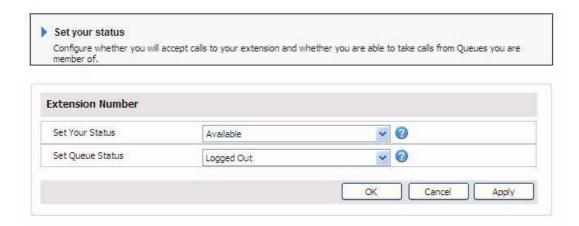

#### Screenshot 7 - Status

In this page you can set your status:

- Set Your Status: Whether you are available to take calls or not. If you set your status
  to away, calls will be treated by the PBX as if your extension is busy.
- Set Your Queue Status: You can login and logout of the Queues. To receive calls from any of the queues, you must be logged in to the queues.



## Dial codes

#### Introduction

Dial codes are particular key/number combinations used to access particular functions within the phone system.

## Call pick-up

If you hear a particular extension ringing, and you know that person is not able to take the call, you can take the call using the 'Call Pickup' feature. To do this, type

#### \*20\* <extension number>

This will redirect the active call from the specified extension to your extension.

You can also retrieve a call from a ringing extension without specifying the extension number. To do this, type \*20\* followed by the send key. This will redirect the first available active call to your extension.

#### **Call Parking**

If you wish to "park" a call and then pick up the call from another extension:

## BLIND TRANSFER BUTTON \*00 to 09 – to park the call.

For example \*01 will place the call in the parking orbit 1.

## \*10-9 - to pick up a parked call.

For example \*11 will pick up any calls parked in parking orbit 1

Parking lots support parking of multiple calls. Therefore, when un-parking, you can add the extension number from which the call was parked to be sure that you un-park the particular call you had parked there.

For example: If extension 100 parked a call in park 0, this call can be picked up by extension 101 by keying in \*10100

Some examples to park a call with popular phones:

- With a Grandstream phone, press the TRNF button and dial \*00
- With a Snom phone, press the TRANSFER button and dial \*00
- With a Polycom phone, press the TRANSFER button, from the screen, then choose the option BLIND and then dial \*00
- With a Cisco phone, choose "more" option on the screen, choose BlndXfr and dial
   \*00
- With a Linksys phone, press the right arrow key on the navigation button for more options and then choose bxfer and dial \*00



Note: Call Pickup and Call Park are only available in commercial editions of 3CX Phone System

#### Voicemail

To leave a message in a Voicemail box of a particular Extension;

#### Dial \*4{ext}

For example, \*4100, will leave a voicemail message in the voicemail box of extension 100

## **Specifying Away / Available status**

To specify away or available status for a particular extension:

Dial \*60 to set the extension as available

Dial \*61 to set the extension to away

Note: Away and Available are only available in commercial editions of 3CX Phone System

#### **Logging in to the Queues**

To log into a queue;

Dial \*62 to log the extension into all the Queues that the extension is a member of.

Dial \*63 to log the extensions out of all the queues to which the extension has logged in.

Note: Queues are only available in commercial editions of 3CX Phone System

#### Intercom

The intercom feature allows a phone system user to make an announcement to another extension without requiring the other party to pick up the handset. The message will be played via the phone's speaker. The audio is two way, and the called party can respond immediately without picking up the handset.

To call a user via the intercom function:

Prefix the extension you wish to call with \*9, followed by the extension. For example to make an intercom call to extension 100 you should dial:

#### '\*9100'

Note: The intercom features require a phone that supports intercom and that is configured to allow it. Check with your administrator if in doubt.



## Conferencing

#### Introduction

Call conferencing allows you to easily setup a conference call for up to 32 callers (license permitting). Although many conference call services exist, it's often easier and cheaper to host your own audio conferences.

Conferences can be set-up ad hoc, without the need to reserve a conference room. This has been done to simplify the set-up of conference calls.

## Creating a call conference

To setup a call conference;

- 1. Dial the conference extension number, by default this is 700
- 2. You will be requested to enter a conference ID. This can be any number, for example '100'. All callers that wish to join the conference must use the same conference ID!
- 3. If you are the first participant, the conference system will ask you to confirm creation of the conference. Press \* to confirm or # to cancel
- 4. You will be asked to speak your name after the beep and press a button to continue.
- You will now enter the conference. If you are the first caller, you will hear music on hold, whilst you wait for the other callers. As soon as another caller joins, his name will be announced.